

GUIDE FOR ORDERING SKIRTS

TO ADAPT RECESSED EQUIPMENT TO SEMI-RECESSED OR SURFACE-MOUNTED

Recessed Model No.	Actual Depth of Cabinet	For Semi-Recessing, Order			For Surface-Mounted Skirt, Order
		2" Skirt	4" Skirt	6" Skirt	
B-3474	4" (102mm)	3662-9	—	—	3309-9
B-3574	4" (102mm)	3662-9	—	—	3309-9
B-352	6-1/2" (165mm)	—	—	—	For surface mounting, remove recessing flange
B-359	4" (102mm)	—	—	—	—
B-3644 Series	4" (102mm)	3662-9	—	—	3309-9
B-369	4" (102mm)	—	—	—	3699-57
B-3706	5-1/2" (139mm)	—	—	—	For surface mounting, remove recessing flange
B-37063	5-9/16" (141mm)	370634-17	—	370639-18	—
B-3803	5-15/16" (151mm)	38032-57	—	—	—
B-38034	3-5/8" (92mm)	—	—	—	380349-57
B-39003 Series	7-5/8" (194mm)	—	3949-57	—	—
B-3944 Series	4" (102mm)	3942-57	—	—	3949-57
B-3961	4" (102mm)	3942-57	—	—	3949-57
B-3974	4" (102mm)	3942-57	—	—	3949-57
B-4369		—	—	—	43699-19
B-43500		—	—	—	435009-19
B-43944		—	—	—	43949-19
B-4706	5-9/16" (141mm)	47064-17	—	—	47069-18

The word *Series* in most cases applies to cabinets in a product category having identical height, width, and depth.

TrimLine™ Models B-3803, B-38034, and B-39003 should be shimmed with washers between back of cabinet and wall support backing to fill space. This avoids distortion of cabinet back.

SKIRT INSTALLATION


Slip skirt over back of cabinet, fitting it snug against back of cabinet flange.

On recessed units to be semi-recessed, verify that existing mounting holes are clear of the skirt. If the holes do not clear the skirt then drill new mounting holes that will put screws into the framing.


On recessed units to be surface mounted, punch new mounting holes in back of cabinet and use washers as doublers for additional strength. Spacer shims should be used between cabinet and framing to prevent distortion or damage to cabinet when screws are tightened.

Position cabinet with skirt into rough wall opening which has been framed accommodate installation of skirted semi-recessed or surface mounted unit. Secure cabinet to framing (either at side or back) with mounting screws.


Screw heads must not project above countersunk holes.

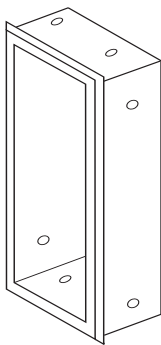

Recessed

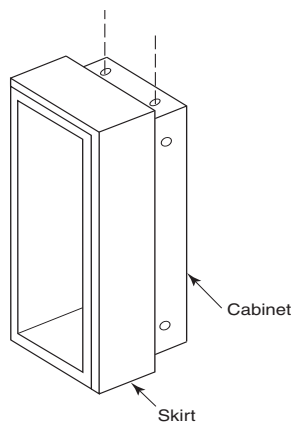

Semi-Recessed

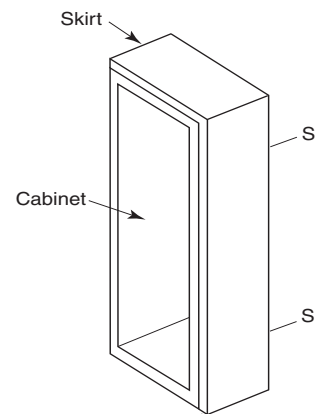

Surface-Mounted



In the U.S.A.: BOBRICK WASHROOM EQUIPMENT, INC.

200 Commerce Drive, Clifton Park, New York 12065-1350, Telephone: (518) 877-7444 • FAX: 518-877-5029
11611 Hart Street, North Hollywood, California 91605-5882, Telephone: (818) 982-9070 • FAX: 818-503-9287
or email BobrickCustomerService@bobrick.com

In Canada: BOBRICK WASHROOM EQUIPMENT COMPANY

45 Rolark Drive, Scarborough, Ontario M1R 3B1 • FAX: (877) 423-8555