

5 ES

Royal[®] OPTIMA Model

Sensor Activated Flushometers

Description

Concealed, Sensor Activated Royal® Model Urinal Flushometer, for 3/4" back spud urinals.

Flush Cycle

Model 195-0.5 ES-S (0.5 gpf/1.9 Lpf) □ Model 195-1.0 ES-S Low Consumption (1.0 gpf/3.8 Lpf) Model 195 ES-S Water Saver (1.5 gpf/5.7 Lpf)

Specifications

Quiet, Concealed, Diaphragm Type, Rough Brass Urinal Flushometer with the following features:

- PERMEX[™] Synthetic Rubber Diaphragm with Dual Filtered Fixed Bypass
- OPTIMA® EL-1500 Self-Adaptive Infrared Sensor with Indicator Light
- Non-Hold-Open Integral Solenoid Operator
- · Die Cast Sensor Cover Plate with no visible Fasteners (for 2-gang Electrical Box)
- 3/4" I.P.S. Wheel Handle Bak-Chek® Angle Stop
- Adjustable Tailpiece
- · High Back Pressure Vacuum Breaker Flush Connection and Spud Coupling for 3/4" Concealed Back Spud
- Sweat Solder Adapter
- High Copper, Low Zinc Brass Castings for Dezincification Resistance
- Non-Hold-Open Integral Solenoid Operator, Fixed Metering Bypass and No External Volume Adjustment to Ensure Water Conservation
- Flush Accuracy Controlled by CID™ Technology Diaphragm, Stop Seat and Vacuum Breaker molded from PERMEX™ Rubber Compound for Chloramine Resistance

Valve Body, Cover, Tailpiece and Control Stop shall be in conformance with ASTM Alloy Classification for Semi-Red Brass. Valve shall be in compliance with the applicable sections of ASSE 1037 and ANSI/ASME A112.19.2. Installation conforms to ADA requirements.

L Dimension

Specify the "L" Dimension for the proper length of the Flush Connection. The "L" Dimension is equal to the Wall Thickness (to nearest whole inch) plus 23/4".

Accessories

Transformer (120 VAC/24 VAC 50 VA) **EL-154 EL-342** Transformer (240 VAC/24 VAC 50 VA)

See Accessories Section and OPTIMA Accessories Section of the Sloan catalog for details on these and other OPTIMA Flushometer variations.

Sloan Electronics are:	LISTED 376U	UPC ® LISTED BY I.A.P.M.O.	F
This space for Architect/Engineer approval			
Job Name		Date	
Model Specified		Quantity	
Variations Specified			
Customer/Wholesaler			
Contractor			
Architect			





Automatic

Sloan OPTIMA® equipped Flushometers provide the ultimate in sanitary protection and automatic operation. There are no handles to trip or buttons to push. The Flushometer operates by means of an infrared sensor that adapts to its surrounding. Once the user enters the sensor's effective range and then steps away, the Flushometer Solenoid initiates the flushing cycle to flush the fixture.

Hygienic

User makes no physical contact with the Flushometer surface. Helps control the spread of infectious diseases. Twenty-four Hour Sentinel Flush keeps fixture fresh during periods of nonuse.

Economical

Automatic operation provides water usage savings over other flushing devices. Reduces maintenance and operation costs.

Practical

Solid state electronic circuitry assures years of dependable, trouble-free operation. The operational components of the Flushometer are identical to a handle activated Royal® Flushometer, proven by 90 years of experience.

- Warrantv
 - 3 year (limited)
- Made in the U.S.A.



WIRING DIAGRAM

EL-1500 SENSOR

٠

EL-1500 SENSOR

24 VAC

COIL WIRE

COIL WIRE

24 VAC COIL

24 VAC COIL

Description

Concealed, Sensor Activated Royal® Model Urinal Flushometer, for ¾" back spud urinals.

OH

Flush Cycle


□ Model 195-0.5 ES-S (0.5 gpf/1.9 Lpf) □ Model 195-1.0 ES-S Low Consumption (1.0 gpf/3.8 Lpf) □ Model 195 ES-S Water Saver (1.5 gpf/5.7 Lpf)

ELECTRICAL SPECIFICATIONS

- Control Circuit Solid State
 24 VAC Input
 24 VAC Output
 8 Second Arming Delay
 24-Hour Sentinel Flush
- OPTIMA Sensor Range Nominal 15" - 30" (381 mm -762 mm) Self-adaptive Window ± 8" (203 mm)

OPERATION


 A continuous, invisible light beam is emitted from the OPTIMA Sensor.



Transformer Sloan Part #EL-154 120 VAC, 50/60 Hz Primary 24 VAC, 50/60 Hz Secondary Class II, UL Listed, 50 VA.

Sloan Part #EL-342 240 VAC, 50/60 Hz Primary 24 VAC, 50/60 Hz Secondary Class II, UL Listed, 50 VA.


2. As the user enters the beam's effective range (15" to 30") the beam is reflected into the OPTIMA Scanner Window and transformed into a low voltage electrical circuit. Once activated, the Output Circuit continues in a "hold" mode for as long as the user remains within the effective range of the Sensor.

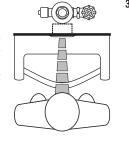

3. When the user steps away from the OPTIMA Sensor, the circuit immediately initiates an electrical "one-time" signal that operates the Solenoid. This initiates the flushing cycle to flush the fixture. The Circuit then automatically resets and is ready for the next user.

One Transformer serves up to ten (10) OPTIMA Closet/Urinal

Flushometers. Specify number of transformers required accordingly.




UNIT #1

UNIT #2


THRU #10 (IF USED)

ROUGH-IN

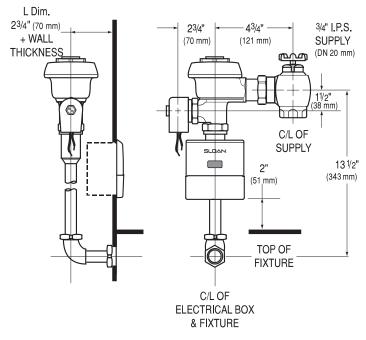

ELECTRICAL BOX INSTALLATION SENSOR LOCATION AND POSITIONING IS CRITICAL

Failure to properly position the electrical boxes to the plumbing rough-in will result in improper installation and impair product performance. All tradesmen (plumbers, electricians, tile setters, etc.) involved with the installation of this product must coordinate their work to assure proper product installation. Installation Template furnished with Flushometer.

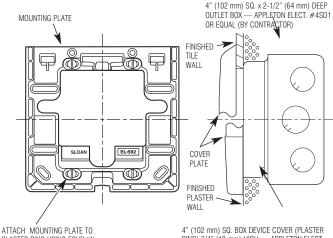

ATTACH MOUNTING PLATE TO PLASTER RING USING FOUR (4) SCREWS (SUPPLIED) 4" (102 mm) SQ. BOX DEVICE COVER (PLASTER RING) 3/4" (19 mm) HIGH — APPLETON ELECT. #8470 OR EQUAL (BY CONTRACTOR)

SLOAN VALVE COMPANY • 10500 SEYMOUR AVENUE • FRANKLIN PARK, IL 60131

Phone: 1-800-982-5839 or 1-847-671-4300 • Fax: 1-800-447-8329 or 1-847-671-4380 • www.sloanvalve.com