

# OPTIMA SYSTEMS

Sensor Operated Flushometers

**OPTIMA** 



# 195 ES-S

### Description

Concealed, Sensor Operated Royal® Model Urinal Flushometer, for 3/4" rear spud urinals.

#### Flush Cycle

Model 195-0.125 ES-S High Efficiency (0.125 gpf/0.5 Lpf)
Model 195-0.25 ES-S High Efficiency (0.25 gpf/1.0 Lpf)
Model 195-0.5 ES-S High Efficiency (0.5 gpf/1.9 Lpf)

#### Specifications

Quiet, Concealed, Diaphragm Type or Cartridge Assembly, Rough Brass Urinal Flushometer for either left or right hand supply with the following features:

- For Flushing Volumes 0.125 and 0.25: Dual Linear Filtered Bypass Diaphragm
- For Flushing Volumes 0.5: Dual Filtered Bypass Diaphragm
- OPTIMA<sup>®</sup> EL-1500 Self-Adaptive Infrared Sensor with Indicator Light
- Non-Hold-Open Integral Solenoid Operator
- Chrome Plated Wall Cover Plate (for 2-gang Electrical Box) with Vandal Resistant Screws
- 3/4" I.P.S. Wheel Handle Bak-Chek® Angle Stop
- Adjustable Tailpiece
- High Back Pressure Vacuum Breaker Flush Connection and Spud Coupling for 3/4" Concealed Rear Spud
- Sweat Solder Adapter
- Chrome Plated Exposed Flushometer Parts
- High Copper, Low Zinc Brass Castings for Dezincification Resistance
- Non-Hold-Open Integral Solenoid Operator, Fixed Metering Bypass and No External Volume Adjustment to Ensure Water Conservation
- Flush Accuracy Controlled by CID™ Technology
- Diaphragm, Stop Seat and Vacuum Breaker to be molded from PERMEX<sup>®</sup> Rubber Compound for Chloramine Resistance

Valve Body, Cover, Tailpiece and Control Stop shall be in conformance with ASTM Alloy Classification for Semi-Red Brass. Valve shall be in compliance with the applicable sections of ASSE 1037, ANSI/ASME A112.19.2. Installation conforms to ADA requirements.

#### L Dimension

Specify the "L" Dimension for the proper length of the Flush Connection. The "L" Dimension is equal to the Wall Thickness (to nearest whole inch) plus 2¾".

#### Accessories

EL-154 Transformer (120 VAC/24 VAC, 50 VA)

EL-342 Transformer (240 VAC/24 VAC, 50 VA)

See Accessories Section and OPTIMA® Accessories Section of the Sloan catalog for details on these and other OPTIMA® Flushometer variations.

#### Fixtures

Consult Sloan for Sloan brand matching fixture options.

Sloan Electronics are:



This space for Architect/Engineer approval	
Job Name	Date
Model Specified	
Variations Specified	
Customer/Wholesaler	
Contractor	
Architect	



**Royal**<sup>®</sup>

Model



## Automatic

Sloan OPTIMA® equipped Flushometers provide the ultimate in sanitary protection and automatic operation. There are no handles to trip or buttons to push. The Flushometer operates by means of an infrared sensor that adapts to its surrounding. Once the user enters the sensor's effective range and then steps away, the Flushometer Solenoid initiates the flushing cycle to flush the fixture.

#### Hygienic

User makes no physical contact with the Flushometer surface. Helps control the spread of infectious diseases. Twenty-four Hour Sentinel Flush keeps fixture fresh during periods of nonuse.

#### Economical

Automatic operation provides water usage savings over other flushing devices. Reduces maintenance and operation costs.

#### Practical

Solid state electronic circuitry assures years of dependable, trouble-free operation. The operational components of the Flushometer are identical to a handle operated Royal<sup>®</sup> Flushometer, proven by over 100 years of experience.

#### Warranty 3 year (limited)

Made in the U.S.A





Sloan Valve Company is buying renewable energy certificates to meet 100% of the company's purchased electricity use at its Franklin Park, Illinois facility.



#### WIRING DIAGRAM

#### Description

Concealed, Sensor Operated Royal® Model Urinal Flushometer, for 3/4" rear spud urinals.

# Flush Cycle

Þ

□ Model 195-0.125 ES-S High Efficiency (0.125 gpf/0.5 Lpf) □ Model 195-0.25 ES-S High Efficiency (0.25 gpf/1.0 Lpf) □ Model 195-0.5 ES-S High Efficiency (0.5 gpf/1.9 Lpf)

#### ELECTRICAL SPECIFICATIONS

Control Circuit Solid State 24 VAC Input 24 VAC Output 8 Second Arming Delay 24 Hour Sentinel Flush


 OPTIMA Sensor Range Nominal 15" - 30" (381 mm - 762 mm) Self-adaptive Window ± 8" (203 mm)

#### Solenoid Operator 24 VAC, 50/60 Hz

Transformer

Sloan Part #EL-154 120 VAC, 50/60 Hz Primary 24 VAC, 50/60 Hz Secondary Class II, UL Listed, 50 VA.

Sloan Part #EL-342 240 VAC, 50/60 Hz Primary 24 VAC, 50/60 Hz Secondary Class II, UL Listed, 50 VA.

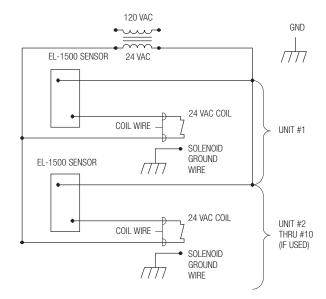


One Transformer serves up to ten (10) OPTIMA Closet/Urinal Flushometers. Specify number of transformers required accordingly.


#### OPERATION

L Dim.


1. A continuous, invisible light beam is emitted from the OPTIMA Sensor.




 As the user enters the beam's effective range (15" to 30") the beam is reflected into the OPTIMA Scanner Window and transformed into a low voltage electrical circuit. Once activated, the Output Circuit continues in a "hold" mode for as long as the user remains within the effective range of the Sensor.

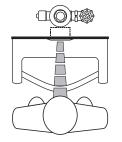


3. When the user steps away from the OPTIMA Sensor, the circuit immediately initiates an electrical "one-time" signal that operates the Solenoid. This initiates the flushing cycle to flush the fixture. The Circuit then automatically resets and is ready for the next user.



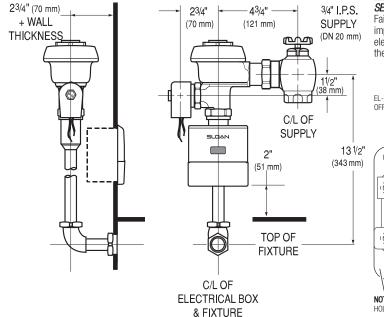

#### ELECTRICAL BOX INSTALLATION SENSOR LOCATION AND POSITIONING IS CRITICAL

Failure to properly position the electrical boxes to the plumbing rough-in will result in improper installation and impair product performance. All tradesmen (plumbers, electricians, tile setters, etc.) involved with the installation of this product must coordinate their work to assure proper product installation.

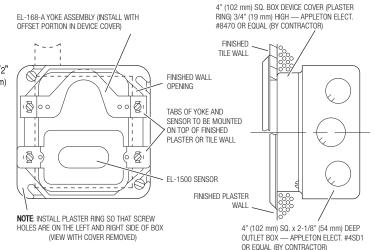

# SLOAN • 10500 SEYMOUR AVENUE • FRANKLIN PARK, IL 60131

Phone: 1-800-9-VALVE-9 or 1-847-671-4300 • Fax: 1-800-447-8329 or 1-847-671-4380 • http://www.sloanvalve.com