







Description

Exposed, Battery Powered, Sensor Activated, Royal® Optima® SMOOTH™ Urinal Flushometer for 1¼" top spud urinals.

Flush Cycle

□ Model 180 Conventional (3.5 gpf/13.2 Lpf) □ Model 180-1.5 Water Saver (1.5 gpf/5.7 Lpf) □ Model 180-1.0 Low Consumption (1.0 gpf/3.8 Lpf)

Specifications

Quiet, Exposed, Diaphragm Type, Chrome Plated Urinal Flushometer with the following features:

Flushometer

- PERMEX™ Synthetic Rubber Diaphragm with Dual Filtered Fixed Bypass
- ADA Compliant Metal Oscillating Non-Hold-Open Handle with Triple Seal Handle Packing
- 1" I.P.S. Screwdriver Bak-Chek[™] Angle Stop
- Free Spinning Vandal Resistant Stop Cap
- Adjustable Tailpiece
- High Back Pressure Vacuum Breaker Flush Connection with One-piece Bottom Hex Coupling Nut
- Spud Coupling and Flange for 11/4" Top Spud
- Sweat Solder Adapter w/Cover Tube and Cast Wall Flange w/Set Screw
- High Copper, Low Zinc Brass Castings for Dezincification Resistance
- Non-Hold-Open Handle, Fixed Metering Bypass and No External Volume Adjustment to Ensure Water Conservation
- Flush Accuracy Controlled by CID[™] Technology
- Diaphragm, Handle Packing, Stop Seat and Vacuum Breaker molded from PERMEX™ Rubber Compound for Chloramine Resistance

Optima SMOOTH Unit

- ADA Compliant OPTIMA[®] SMOOTH[™] Battery Powered Infrared Sensor for automatic "Hands-free" operation
- Sensor with Automatic Range Adjustment
- Chrome Plated Metal Sensor Housing
- Mechanical Manual Override Flush Handle
- Four (4) Size C Batteries included
- "Low Battery" Flashing LED
- "User in View" Flashing LED
- 25 to 80 psi Operating Range

Valve Body, Cover, Tailpiece and Control Stop shall be in conformance with ASTM Alloy Classification for Semi-Red Brass. Valve shall be in compliance to the applicable sections of ASSE 1037.

Variations

11/2" Flush Connection

This space for Architect/Engineer approval	
Job Name	Date
Model Specified	Quantity
Variations Specified	
Customer/Wholesaler	
Contractor	
Architect	





ADA Compliant Automatic

Sloan SMOOTH[™] equipped Flushometers provide the ultimate in sanitary protection and automatic operation. There is no need for AC hookups or wall alterations. The Flushometer operates by means of a battery powered infrared sensor. Once the user enters the sensor's effective range and then steps away, the SMOOTH[™] Unit initiates the flushing cycle to flush the fixture. State-of-the-art Technology enables activation of a manual override without "double flushing" occurring as the user departs (locks out sensor for approximately 10 seconds).

Hygienic

The Royal[®] Optima[®] SMOOTH[™] Flushometer is the next advancement in hygiene. It uses sensor technology to transform manual installations into electronic, hands-free operation. User makes no physical contact with the Flushometer surface except to initiate the Override Handle when required. Helps control the spread of infectious diseases.

Economical

Automatic operation provides water usage savings over other flushing devices. Reduces maintenance and operation costs. Installation and battery replacement does not require turning off water to the valve.

Warranty

3 year (limited)

Description

Exposed, Battery Powered, Sensor Activated, Royal[®] Optima[®] SMOOTH[™] Urinal Flushometer for 1¼" top spud urinals.

Flush Cycle

□ Model 180 Conventional (3.5 gpf/13.2 Lpf) □ Model 180-1.5 Water Saver (1.5 gpf/5.7 Lpf) □ Model 180-1.0 Low Consumption (1.0 gpf/3.8 Lpf)

ELECTRICAL SPECIFICATIONS

- Control Circuit
 6 VDC Input
- OPTIMA Sensor Type Active Infrared with Automatic Adjustment

 OPTIMA Sensor Range Normal Range:
 26" - 32" (660 mm-813 mm) Reduced Range:
 20" - 26" (508 mm-660 mm)

- Battery Type
 (4) Size C Alkaline
- Battery Life
 2 Years @ 4,000 Flushes/Month
- Indicator Lights
 User in View/Low Battery
- **Operating Pressure** 25-80 psi (172-552 kPa)



cycle.

1. A continuous, invisible light beam is emitted from the SMOOTH unit's Infrared Sensor.

2. When the user enters the

sensor's effective range, the Red

LED light in the sensor window flashes for eight seconds. After

eight seconds of sensing the

3. When the user steps away, the

unit initiates a flush cycle. The unit then automatically resets and is ready for the next user.

user, the light will stop flashing


and the unit waits for the user to


step away before initiating a flush





DIMENSIONS

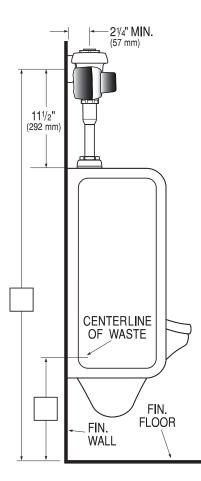

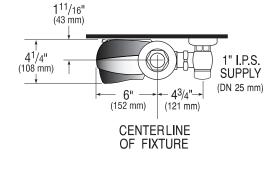

Top View

Side View

SLOAN VALVE COMPANY • 10500 SEYMOUR AVENUE • FRANKLIN PARK, IL 60131

Phone: 1-800-9-VALVE-9 or 1-847-671-4300 • Fax: 1-800-447-8329 or 1-847-671-4380 • www.sloanvalve.com