

model 874301S

AXION® MSR Eye/Face Wash

FEATURES & BENEFITS

OPTIONS

For more information, visit www.hawsco.com or call (888) 640-4297.



SPECIFICATIONS


The Haws 874301S eye/face wash option for the model 8740 overhead tank shower uses the medically acclaimed AXION® MSR eye/face wash head for emergency flushing. The green ABS plastic head uses an inverted directional laminar flow to sweep contaminants away from the vulnerable nasal cavity, and is protected by a yellow plastic pop-off dust cover. Assembly includes a chrome-plated brass ball valve with stainless steel ball and stem, galvanized piping and flexible polyvinyl tubing to allow it to be fitted to the 8740 by the customer. Refer to the Operation and Maintenance Manual for instructions. Eye/face wash valve is designed to make the flushing of the contaminants occur with the simple push of a stainless steel flag.

APPLICATIONS

Specifically designed to be used with the 8740 overhead tank shower. $\,$

NOTES:

EYE/FACE WASH MATERIAL:
PIPE & FITTINGS: GALVANZED STEEL
VALVE: BRONZE
TUBING: PVC PLASTIC WITH POLYESTER BRAID
ANSI Z358.1 COMPLIANCE REQUIREMENTS:
MIN FILL PRESSURE: 20 PSIG
MAX FILL PRESSURE: 60 PSIG
MIN FILL FLOW RATE: 20 GPM FOR SHOWER
AND EYE/FACE WASH

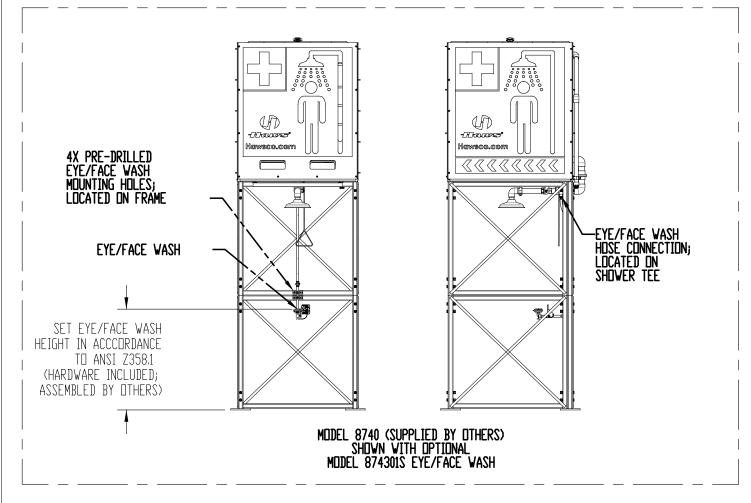

EYE/FACE WASH HOSE BARB: INSTALL IN MODEL 8740 SHOWER TEE SELF-TAPPING SCREWS; INSTALL IN PRE-DRILLED HOLES LOCATED ON FRAME

> MDDEL 874301S EYE/FACE WASH **ASSEMBLY**

REFER TO MODEL 8740 MANUAL FOR DETAILED EYE-FACEWASH ASSEMBLY AND INSTALLATION INSTRUCTIONS

Maurs

1455 KLEPPE LANE SPARKS, NEVADA 89431 (775) 359-4712 FAX (775) 359-7424 E-MAIL: HAVS@HAVSCD.COM VERSITE: VVV.HAVSCO.COM

0510000848.D

SHEET 1 OF 1

REVISION

874301S -AXION MSR Eye/Face Wash 8740 Assembly 10/09/18 SCALE: 140 DRAVING TYPE: