

### **CODE NUMBER**

3250467

#### DESCRIPTION

1.0 gpf, Polished Chrome Finish, Single Flush, 1" Straight Control Stop, Battery, G2 Exposed Sensor Urinal Flushometer.

#### **DETAILS**

Flush Volume: 1.0 gpf (3.8 Lpf)Finish: Polished Chrome (CP)

Power Type: BatteryBattery Life: 6 yearsValve: Diaphragm

• Valve Body Material: Semi-red Brass

• Fixture Type: Urinal

• Fixture Connection: Top spud

• Rough-In Dimension: 11 ½" (292mm)

Spud Coupling: ¾" (19mm)
Supply Pipe: ¾" (19mm)
Control Stop: 1" Straight (E)

### **FEATURES**

- Sweat Solder Adapter with Cover Tube and Cast Set Screw Wall Flange
- Handle Packing, Main Seat, Stop Seat and Vacuum Breaker Molded from PERMEX® Rubber Compound for Chloramine resistance
- "Low Battery" Flashing LED
- Fixed Metering Bypass and No External Volume Adjustment to Ensure Water Conservation
- Flex Tube Diaphragm designed for improved life and reduced maintenance
- Engineered Metal Cover with replaceable Lens Window
- Four (4) Size AA alkaline Batteries included
- Courtesy Flush® Override Button
- Infrared Sensor with Multiple-focused, Lobular Sensing Fields for high and low target detection
- PERMEX® Synthetic Rubber Diaphragm with Dual Filtered Fixed Bypass

### **VIDEOS**



**PVD Special Finishes** 



### **COMPLIANCES & CERTIFICATIONS**









(ADA Compliant, cUPC Certified, BAA Compliant, UL Certified)

### RECOMMENDED SPECIFICATION

Valve Body, Cover, Tailpiece and Control Stop shall be in conformance with ASTM Alloy Classification for Semi-Red Brass. Valve shall be in compliance with the applicable sections of ASSE 1037 and ANSI/ASME 112.19.2.

### **ELECTRICAL SPECIFICATIONS**

• Battery Life: 6 years

# **VALVE OPERATING PRESSURE (FLOWING)**

15–80 PSI (103–552 kPa). Specific fixtures may require greater minimum flowing pressure - consult manufacturer requirements.

# **DOWNLOADS**

- Optima Plus Valve Installation Instructions
- G2 Repair and Maintenance Guide
- Control Stop Repair and Maintenance Guide
- Flush Connections Flanges Repair and Maintenance Guide
- Tail Piece Repair and Maintenance Guide
- Sloan Optima Plus Repair and Maintenance Guide
- Flushometer Pressure gauges
- Additional Downloads

## **NOTES**

All information contained within this document subject to change without notice.

Looking for other variations of the G2 8186 product? View the general spec sheet with all options.


Find a compatible urinal for this flushometer.

Find a compatible water closet for this flushometer.

Phone: 800.982.5839 • Fax: 800.447.8329 • sloan.com



# **ROUGH-IN**

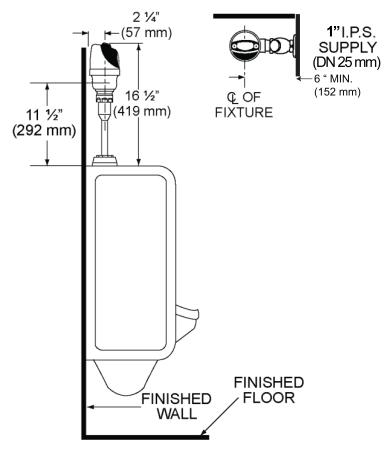

Note: Lens Deflector no longer needed for targeting children or wheel chair users.

Typical Urinal Installation