

Model

WEUS-1000.1301-0.125 ES-S

OPTIMA® Systems Sensor Activated HEU Flushometer and HEU Urinal Fixture



DESCRIPTION

Complete system with exposed, sensor activated, Royal® OPTIMA® HEU Flushometer and vitreous china HEU urinal fixture.

Flush Cycle Model WEUS 1000.1301-0.125-ES-S (0.125 gpf/0.5 Lpf)

Code: 10001301





Meets the American Disabilities Guidelines • 100 % factory flush tested and ANSI A117.1 requirements when installed according to these requirements.

NOTE: Plumbing System Requirements √ Minimum Flowing Pressure: 25 PSI

√ Maximum Fixture Static Pressure: 80 PSI

SPECIFICATIONS

Quiet, exposed, sensor operated diaphragm type. chrome plated HEU Flushometer for either left or right hand supply and vitreous china HEU urinal with the following features:

Flushometer and OPTIMA® ES-S Unit

- PERMEX® Synthetic Rubber Diaphragm with **Dual Bypass**
- OPTIMA® EL-1500 Self-Adaptive Infrared Sensor with Indicator Light
- Non-Hold-Open Integral Solenoid Operator
- Chrome Plated Wall Cover Plate (for 2-gang Electrical Box) with Vandal Resistant Screws
- 3/4" I.P.S. Screwdriver Bak-Chek® Angle Stop
- Free Spinning Vandal Resistant Stop Cap
- Adjustable Tailpiece
- High Back Pressure Vacuum Breaker Flush Connection with One-Piece Bottom Hex Coupling Nut, Spud Coupling and Flange for 34" Top Spud
- Sweat Solder Adapter w/Cover Tube and Cast Wall Flange w/Set Screw
- High copper, low zinc brass castings for dezincification resistance
- · Non-Hold-Open Integral Solenoid Operator, Fixed Metering Bypass and no external volume adjustment to ensure water conservation
- Flush accuracy controlled by CID® technology
- · Diaphragm, Stop Seat and Vacuum Breaker to be molded from PERMEX® rubber compound for chloramine resistance
- Valve Body, Cover, Tailpiece and Control Stop shall be in conformance with ASTM Alloy Classification for Semi-Red Brass. Valve shall be in compliance to the applicable sections of ASSE 1037/ ASME A112.19.2/CSA B45.1

Fixturel

- · Wall hung vitreous china
- · Washdown flushing action
- · Vandal resistant strainer assembly included
- ¾" I.P.S. top spud inlet
- 2" NPT outlet flange
- · All mounting hardware included
- Integral flushing rim
- · Compliant to the applicable sections of ASME A112.19.2/cSA B45.1
- · Carrier not included

FEATURES

Automatic

Sloan OPTIMA® equipped Flushometers provide the ultimate in sanitary protection and automatic operation. There are no handles to trip or buttons to push. The Flushometer operates by means of an infrared sensor that adapts to its surroundings. Once the user enters the sensor's effective range and then steps away, the Flushometer Solenoid initiates the flushing cycle to flush the fixture.

Hygienic

User makes no physical contact with the Flushometer surface. Helps control the spread of infectious diseases. 24-hour Sentinel Flush keeps fixture fresh during periods of nonuse.

Economical

Automatic operation and a low flush volume provide water savings over other flushing devices. Reduces maintenance and operation costs.

Practical

Solid state electronic circuitry assures years of dependable, trouble-free operation. The operational components of the Flushometer are identical to a handle operated Royal® Flushometer, proven by more than 100 years of experience.

Warranty

3 year (limited)





This space for Architect/Engineer approval	
Job Name	Date
Model Specified	Quantity
Variations Specified	
Customer/Wholesaler	
Contractor	
Architect	

SLOAN

Sloan Valve Company 10500 Seymour Avenue Franklin Park, IL 60131

Phone: 1-800-9-VALVE-9 (982-5839)

or 1-847-671-4300

Fax: 1-800-447-8329 or 1-847-671-4380

www.sloanvalve.com

Copyright @ 2013 Sloan Valve Company WEUS-1000.1301 11-13



Model WEUS-1000.1301-0.125 ES-S



WEUS-1000.1301-0.125 ES-S
OPTIMA® Systems Sensor Activated HEU Flushometer and HEU Urinal Fixture

DESCRIPTION

Complete system with exposed, sensor activated, Royal® OPTIMA® HEU Flushometer and vitreous china HEU urinal fixture.

Flush Cycle

Model WEUS 1000.1301-0.125-ES-S (0.125 gpf/0.5 Lpf)

ELECTRICAL SPECIFICATIONS

· Control Circuit

Solid State

24 VAC Input

24 VAC Output

8 Second Arming Delay

24 Hour Sentinel Flush

OPTIMA® Sensor Range

Nominal 15" - 30" (381 mm - 762 mm) Self-adaptive Window \pm 8"(203 mm)


Solenoid Operator

24 VAC, 50/60 Hz


Transformer Accessories

EL-154 Transformer (120 VAC/24 VAC 50 VA) EL-342 Transformer (240 VAC/24 VAC 50 VA)


OPERATION

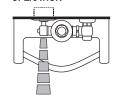

 A continuous, invisible light beam is emitted from the OPTIMA® Sensor.

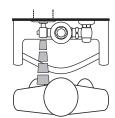



2. As the user enters the beam's effective range (15" to 30") the beam is reflected into the OPTIMA® Scanner Window and transformed into a low voltage electrical circuit. Once activated, the Output Circuit continues in a "hold" mode for as long as the user remains within the effective range of the sensor.

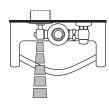

3. When the user steps away from the OPTIMA® Sensor, the circuit immediately initiates an electrical "one-time" signal that operates the Solenoid. This initiates the flushing cycle to flush the fixture. The Circuit then automatically resets and is ready for the next user.

NOTE: All vitreous china dimensions shown in these drawings are nominal. Dimensions can vary within the tolerances established in the governing ASME A112.19.2/CSA B45.1 standard. Please take this into consideration when planning rough-in and plumbing layouts.

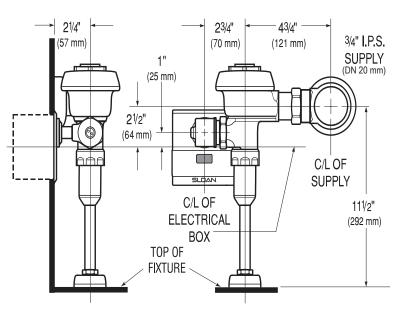

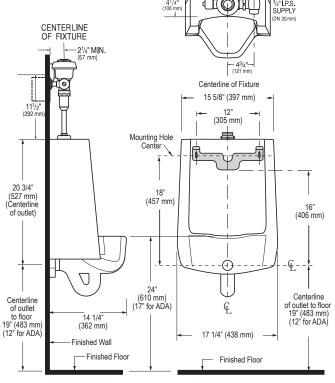

SLOAN VALVE COMPANY • 10500 SEYMOUR AVENUE • FRANKLIN PARK, IL 60131

Phone: 1-800-9-VALVE-9 or 1-847-671-4300 • Fax: 1-800-447-8329 or 1-847-671-4380 • www.sloanvalve.com